


KinderSign - Connect the Android Tablet to WiFi in Kiosk Mode


The WiFi Connection for your Android tablet is normally set during the initial setup of the Device. If you need to change the original WiFi Connection:

A Tap the **Information** icon  located in the lower-left corner to access the settings menu.

B Tap **Settings** to view the available options.

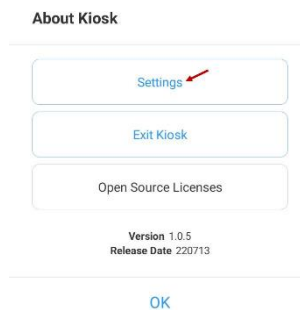


C Tap on the **WiFi** option to display a list of available networks.

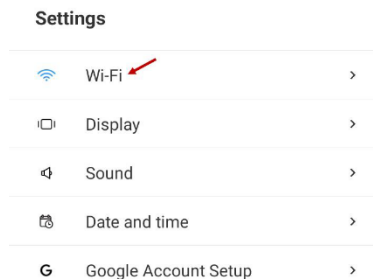


D Tap **Connections** and make sure WiFi is turned on



E Tap the name of the secure WiFi network you would like to join.

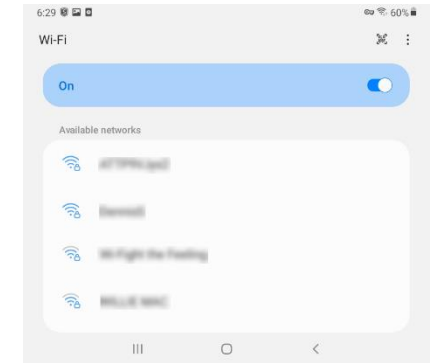

F Enter the password for the secure WiFi network, then tap **Connect**.

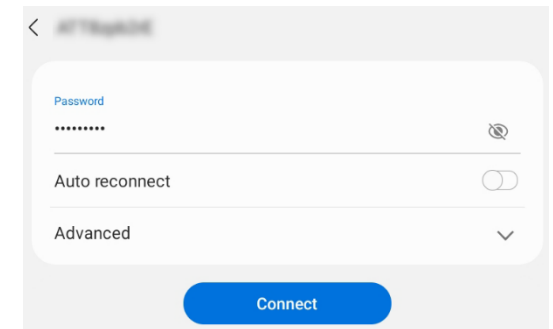

G Check the signal strength on the top right corner of the tablet screen to confirm the tablet is connected to WiFi.



H Once you confirm the connection, tap the **Home** button to return to the home screen.

